


**hameco**

**HS-44**

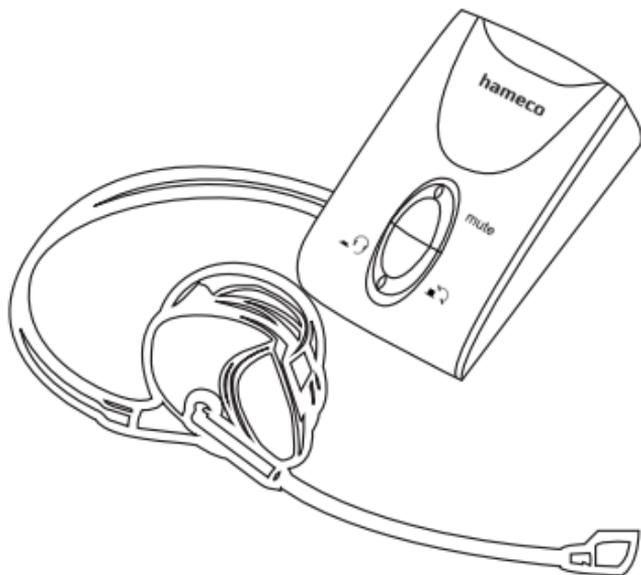

**User Manual**

## PACKING



Switch box  
base



Headset




Connecting  
cord



Instruction

## DIAGRAM & DIAGRAM KEY

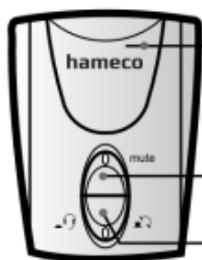

Selector cover


Mute button

Handset/  
Headset  
switch  
button



Headset jack

Volume  
control

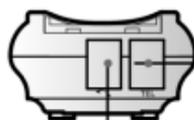

TEL line jack

Handset jack

## INSTALLATION

1. Compatible with most telephone systems including P.B.X.
2. Easy to install
3. Select switch (under the Selector Cover)
4. Handset/headset switch and mute switch
5. RJ-9 Modular



## OPERATION

1. Use handset as needed.
2. Using the headset
  - a. Remove the telephone handset from the cradle of the telephone and dial as usual.
  - b. Press the Switch Button.
  - c. To receive a call using the headset, just lift the handset and press the Switch Button.
  - d. To disconnect a call, just hang up/place the handset on the cradle.
3. Mute: Press the Mute Button to ensure that your voice cannot be heard by the caller at the other end of the line.
4. Adjust the headset microphone by moving it closer to your mouth (ideal position is a 2-finger distance from your mouth to the microphone boom).
5. Adjust the volume level on the right side.

## CHECK

Check that your handset/headset has been switched on, all cords are connected properly, and that the correct channel has been selected.

## SAFETY

For your own safety, this product should only be used with CE and RoHS approved equipment. Using this headset with non-approved equipment would void the warranty of this product.

## DISPOSAL OF YOUR PRODUCT

Municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials to reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

