

# Wideband NC Headset




# HS-2020M-GQD/HS-2020D-GQD User Manual

www.hameco.eu

### hameco

#### HS-2020M-GQD/2020D-GQD user manual

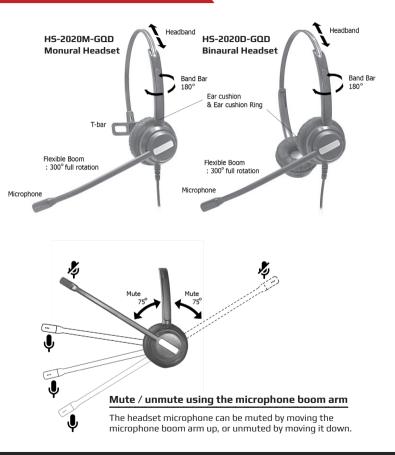

#### www.hameco.eu

### Adjustable Tubed Headband & T-bar

To lengthen headband, simply pull the metal part of band out of plastic sleeve or to shorten, push the metal part of the band back into sleeve.


The metal band can also be bent or manipulated to fit your head size.

The T-bar in the picture is comfortable to wear on your head.

Band bar can be rotated by 180 degrees as the figure.

### Ear Cushion & Ear Cushion Ring

Ear Cushion Ring can seesaw. You can wear more comfortable.

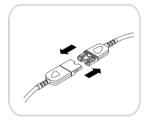

## QD : Quick Disconnector

The QD is the point where your headset is connected to the Amplifier or direct to the telephone. To disconnect, simply pull apart the two halves. To reconnect, simply plug in the two halves.



## **Clothing Clip**

Clip the clothing clip onto your clothes. This will take the weight of the headset cord away from the headset

# 5. CE statement:

This device complies with the related CE standards.

# 6. Product disposal

#### Safety

For your own safety, this product should only be used with CE and RoHS approved equipment. Using this headset with non-approved equipment would void the warranty of this product.

#### **Disposal of your product**

Municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials to reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

